# Fitting and Removing Your PME Accelerator Over-Ring

1) When fitting and removing the Accelerator Over-Ring ensure that you only ever hold the component from bracket **'D'.** This is very important as pressure applied elsewhere can cause damage to sensitive electronic components.
2) Locate tab **'E'** with slot **'F'**
3) Whilst firmly holding down button **'C'** push the locating tab **'E'** into the slot **'F'**. Ensure that you are holding the device from bracket **'D'.**
4) Once the over ring is correctly fitted button **'C'** will return to its original position.

Removal is reverse of fitting procedure

**NOTE:** When Accelerator Over-Ring is not in use it is important that it is stowed safely where it can not be damaged. Sensitive electronic components can be easily damaged if mistreated.

PME can not be held responsible for any damages or injury caused by incorrect use of the PME Accelerator Over-Ring. Please ensure your license is endorsed for use of this adaptive device. If you are unsure contact your local motor authority.

It is imperative that during routine maintenance or whenever your vehicle is operated by a driver that is not endorsed to use this adaptive device, the Accelerator over ring is removed, Switch A is toggled in the off position and the folding accelerator pedal is returned to the original position (if fitted).

PME recommend periodic maintenance and visual inspection of the Electronic Radial Hand Control at 6 monthly intervals.

Problem Management Engineering Pty Ltd, 2017
(02) 9482 2808
6 Kookaburra Road, Hornsby Heights NSW 2077
Info@pmeautoconversions.com.au
pmeautoconversions.com.au
MVRL 30140

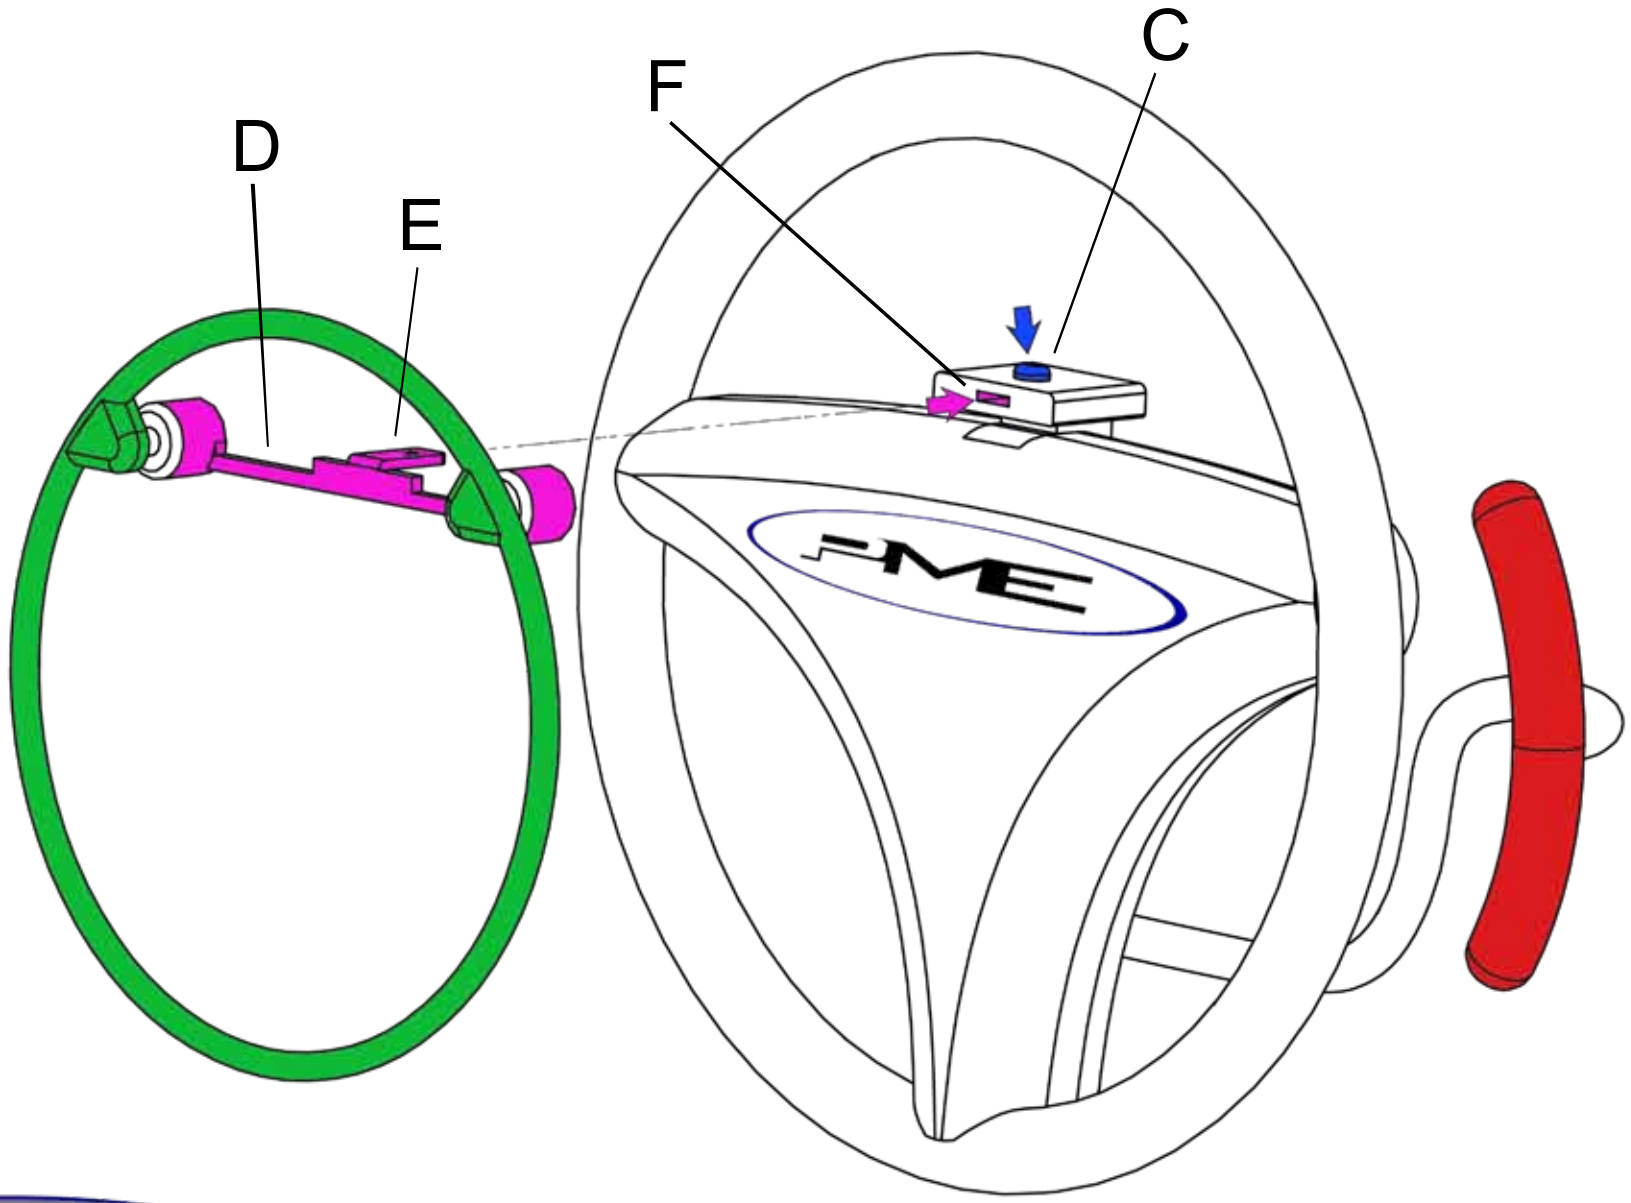


PME
(02) 9482 2808
WWW.PMEAUTOCONVERSIONS.COM.AU

# Activating your PME Accelerator Over-Ring

1) If your vehicle is fitted with an optional folding pedal please ensure that it is in the upright position before activating the Accelerator Over-Ring.
2) To activate your Accelerator Over-Ring start your vehicle and toggle switch **'A'**. The red LED will illuminate to confirm your Accelerator Over-Ring is now switched on.
3) You are now required to apply the brakes of your vehicle by firmly applying pressure to the hand controls brake lever **“B”** in the direction of the red arrow.
4) Your Accelerator Over-Ring is now ready for use. Before shifitng your transmission into drive smoothly push the Accelerator Over-Ring **‘A’** in the direction of the arrows to confirm your Accelerator Over-Ring is activated.
5) The Accelerator Over-Ring can be deactivated if your vehicle is used by another driver by toggling switch **'A'** so that the red LED is no longer illuminated It is recommended that the Accelerator Over-Ring is also removed in this scenario.

**Note:** If required switch **'B'** can be toggled while the PME Accelerator Over-ring is in operation to reduce the sensitivity of the accelerator by **50%**. This is useful when parking, driving on slippery surfaces or during tight manoeuvers.

PME can not be held responsible for any damages or injury caused by incorrect use of the PME Accelerator Over-Ring. Please ensure your license is endorsed for use of this adaptive device. If you are unsure contact your local motor authority.

It is imperative that during routine maintenance or whenever your vehicle is operated by a driver that is not endorsed to use this adaptive device the Accelerator over ring is removed, Switch A is disabled and the folding accelerator pedal is in the original position (if fitted).

PME recommend periodic maintenance and visual inspection of the Accelerator Over-Ring at 6 monthly intervals.

Problem Management Engineering Pty Ltd, 2017
(02) 9482 2808
6 Kookaburra Road, Hornsby Heights NSW 2077
Info@pmeautoconversions.com.au
pmeautoconversions.com.au
MVRL 30140

Located to the Right or Left of the steering wheel (depending on vehicle)

Switch A

Switch B

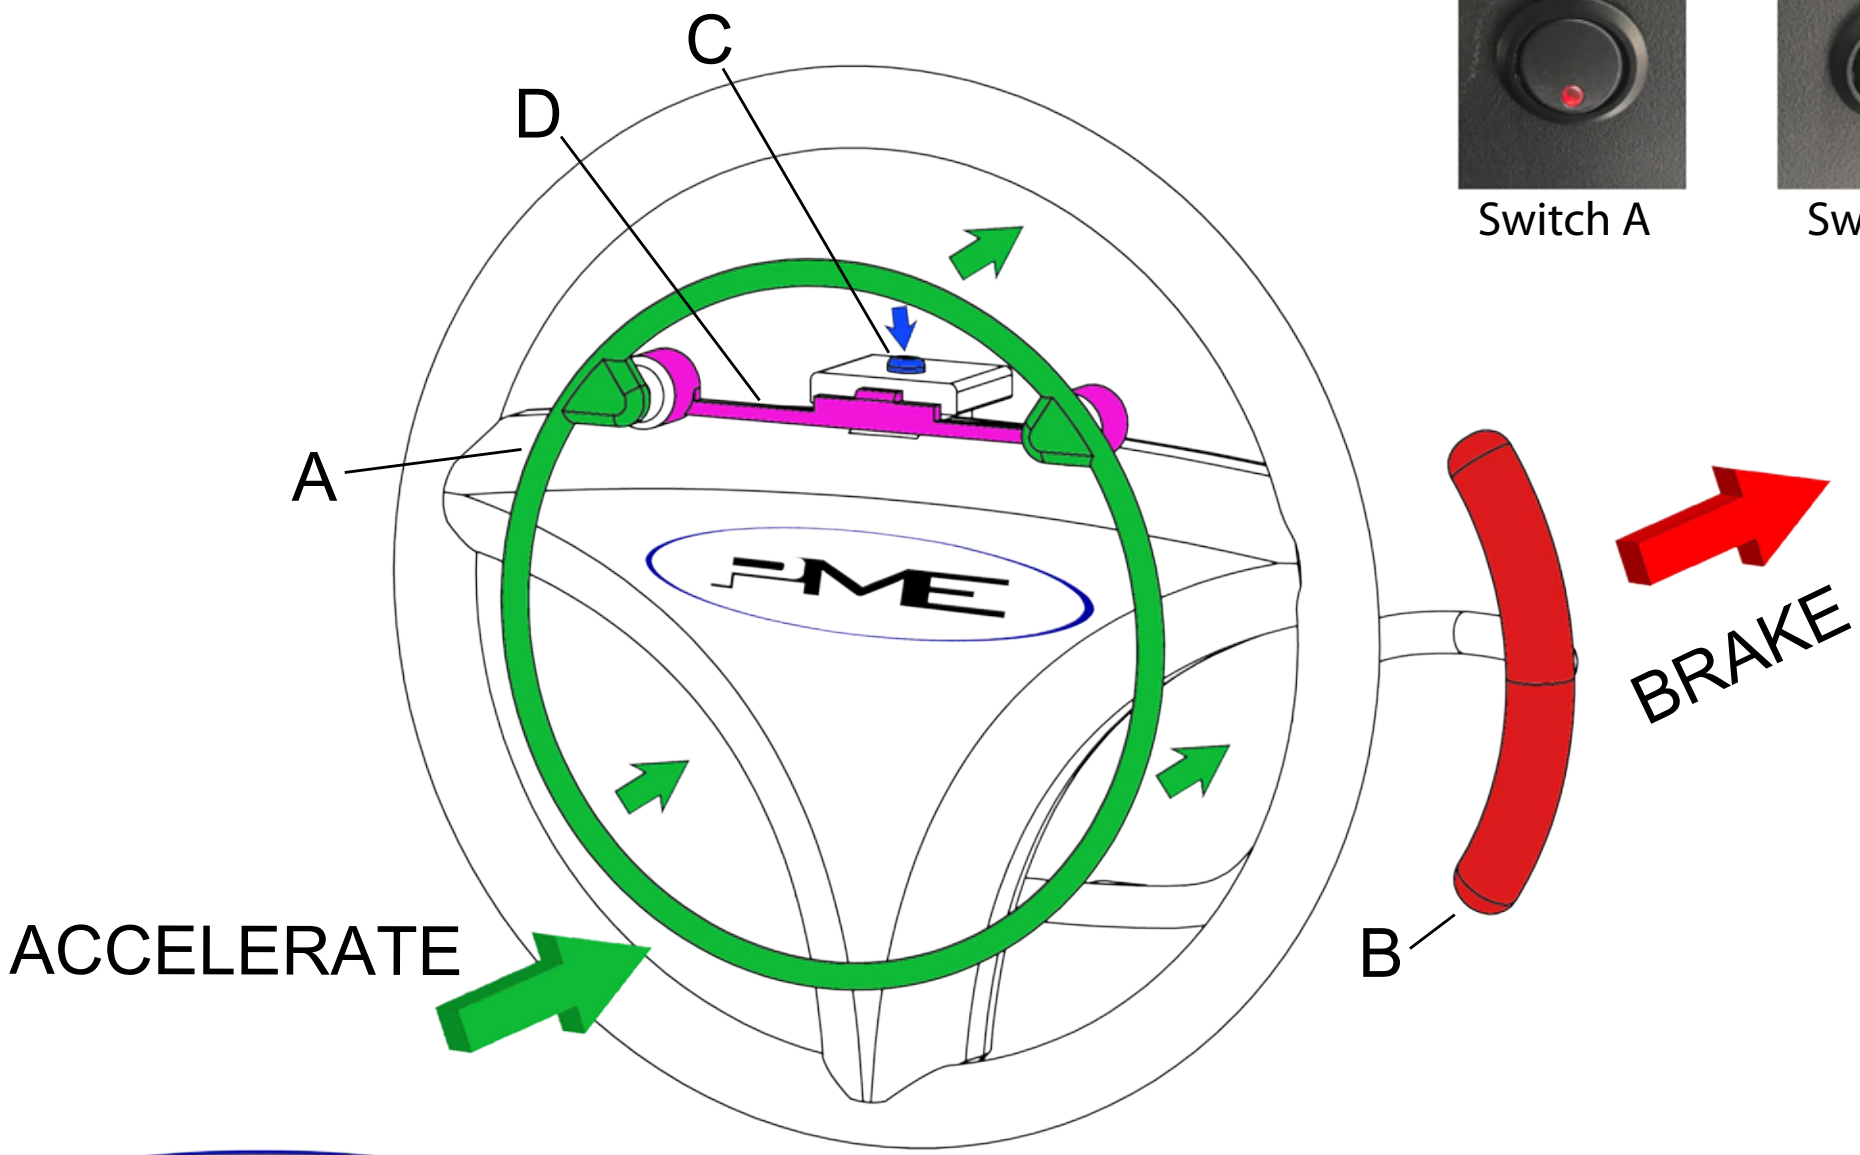


(02) 9482 2808
WWW.PMEAUTOCONVERSIONS.COM.AU

PME AUTO CONVERSIONS

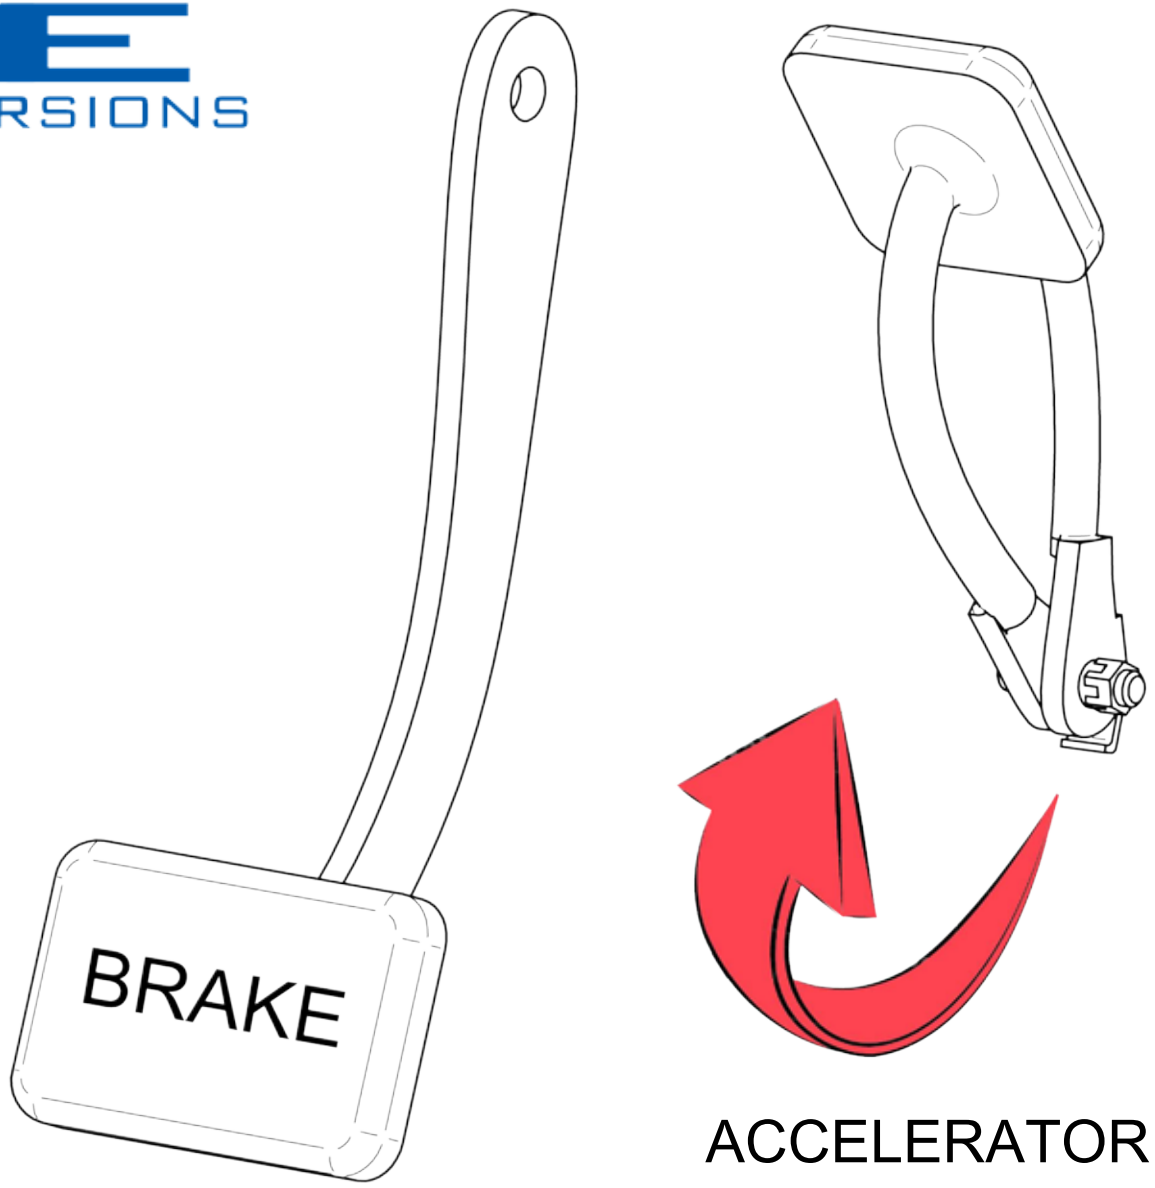


ACCELERATOR UP
(HAND CONTROL IN USE)

# OPTIONAL MULTI FUNCTION ACCESSORY SWITCH

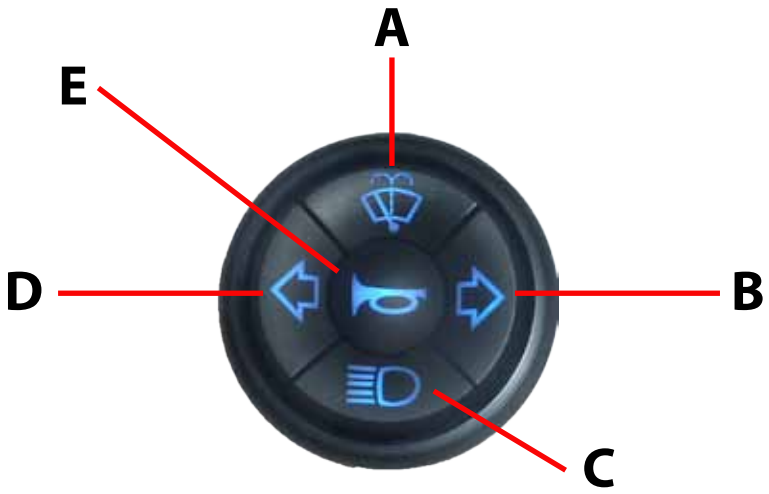


**A)** **Press** once to activate intermittent wipers
**Second Press** to activate low speed wipers
**Third Press** to activate high speed wipers (optional)
**Press** once more to cancel wipers. When wipers are cancelled you will hear two 'beeps'
**Hold** to activate windscreen washer jets.

**B)** **Press** to activate right indicator. This will self cancel once you have completed your manoeuver.
During lane changing manoeuvers you may need to cancel the indicator manually by pressing the button again.

**C)** **Short Press** to flash the high beams on your vehicle.
**Long Press** to toggle your high beams on. Long press again to deavtivate.

**D)** **Press** to activate left indicator. This will self cancel once you have completed your manoeuver.
During lane changing manoeuvers you may need to cancel the indicator manually by pressing the button again.

**E)** **Press** to activate your vehicles horn.

Problem Management Engineering Pty Ltd, 2017
(02) 9482 2808
6 Kookaburra Road, Hornsby Heights NSW 2077
Info@pmeautoconversions.com.au
pmeautoconversions.com.au