Left Foot Accelerator Assembly

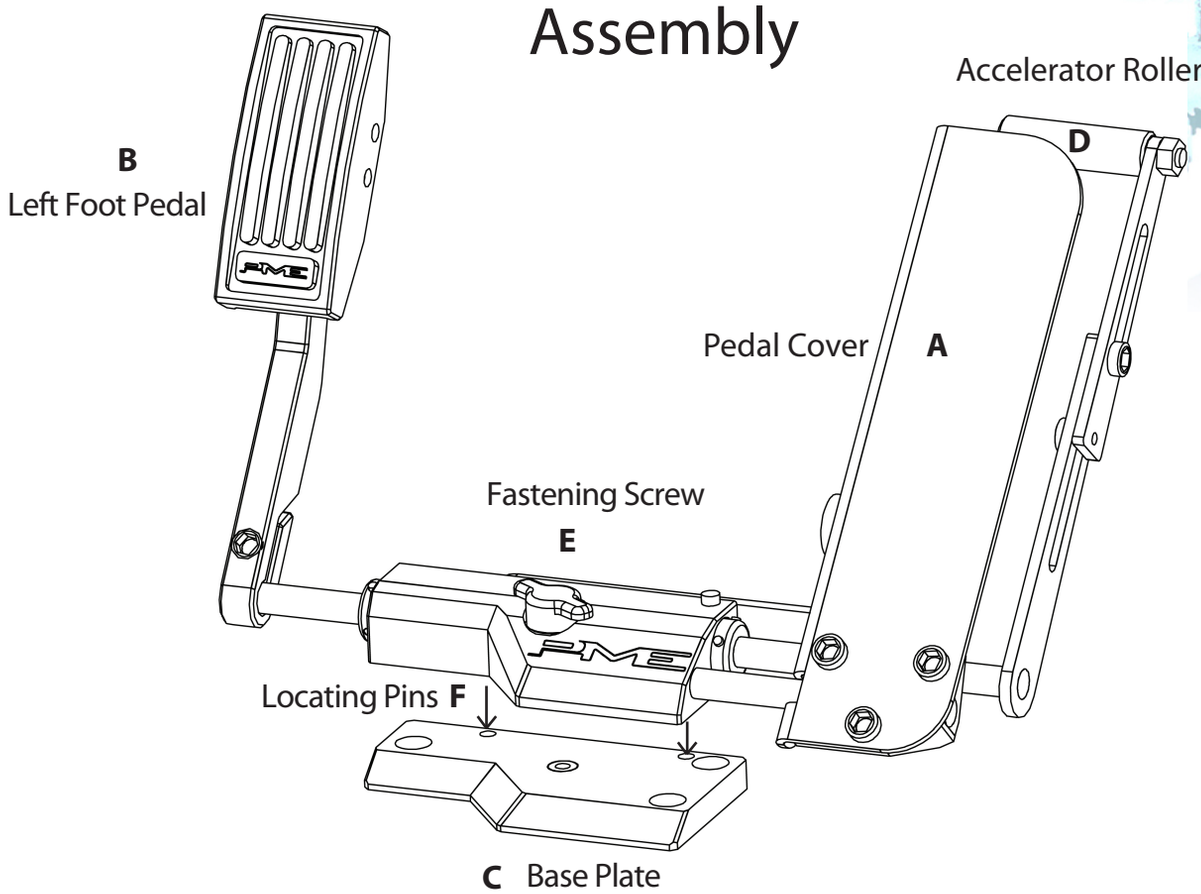

1) Before fitting ensure Left Foot Pedal '**B**' is in upright position

2) Position left Foot Accelerator Assembly so that Accelerator Roller **'D'** sits on top of your vehicles accelerator pedal

3) Locate Left Foot Accelerator Assembly so that the locating pins **'F'** align with base plate **'C'**

4) Firmly tighten Fastening Screw **'E'** to secure Left Foot Accelerator Assembly to Base Plate **'C'**

5) Before starting vehicle confirm correct operation of left foot accelerator assembly by depressing Left Foot Pedal **'B'** and ensuring it returns to the upright position.

Removal is reverse of fitting procedure.

PME can not be held responsible for any damages or injury caused by incorrect use of the Left Foot Accelerator Assembly. Please ensure your license is endorsed for use of this adaptive device. If you are unsure please contact your local motor authority. It is imperative that during routine maintenance or whenever your vehicle is operated by a driver who is not endorsed to use this adaptive device; The Left Foot Accelerator assembly must be removed from the vehicle

PME recommend periodic maintenance and visual inspection of the Left foot Accelerator at 6 monthly intervals.

Problem Management Engineering Pty Ltd, 2017
(02) 9482 2808
6 Kookaburra Road, Hornsby Heights NSW 2077
Info@pmeautoconversions.com.au
pmeautoconversions.com.au
MVRL 30140