Mechanical Radial Hand Controls

1) If your vehicle is fitted with an optional folding accelerator pedal ensure that it is in the upright position before using the Mechanical Radial hand controls .
2) To operate the accelerator on your Mechanical Radial hand control gently apply presure on the lever **'AB'** in the direction of the green arrow (downwards / towards knee).
3) To operate the brake on your Mechanical Radial Hand Control gently apply pressure to the lever **'AB'** in the direction of the red arrow (forwards / towards dashboard).
4) Always confirm the operation of the hand controls functions before shifting your vehicle into drive.

PME can not be held responsible for any damages or injury caused by incorrect use of the Mechanical Radial Hand Control. Please ensure your license is endorsed for use of this adaptive device. If you are unsure contact your local motor authority.

It is imperative that during routine maintenance or whenever your vehicle is operated by a driver who is not endorsed to use this adaptive technology; that driver is aware of the Mechancial Radial hand controls and the folding accelerator pedal is returned to its original position.

PME recommend periodic maintenance and visual inspection of the Push Pull hand control at 6 monthly intervals.

Problem Management Engineering Pty Ltd, 2017
(02) 9482 2808
6 Kookaburra Road, Hornsby Heights NSW 2077
Info@pmeautoconversions.com.au
pmeautoconversions.com.au
MVRL 30140

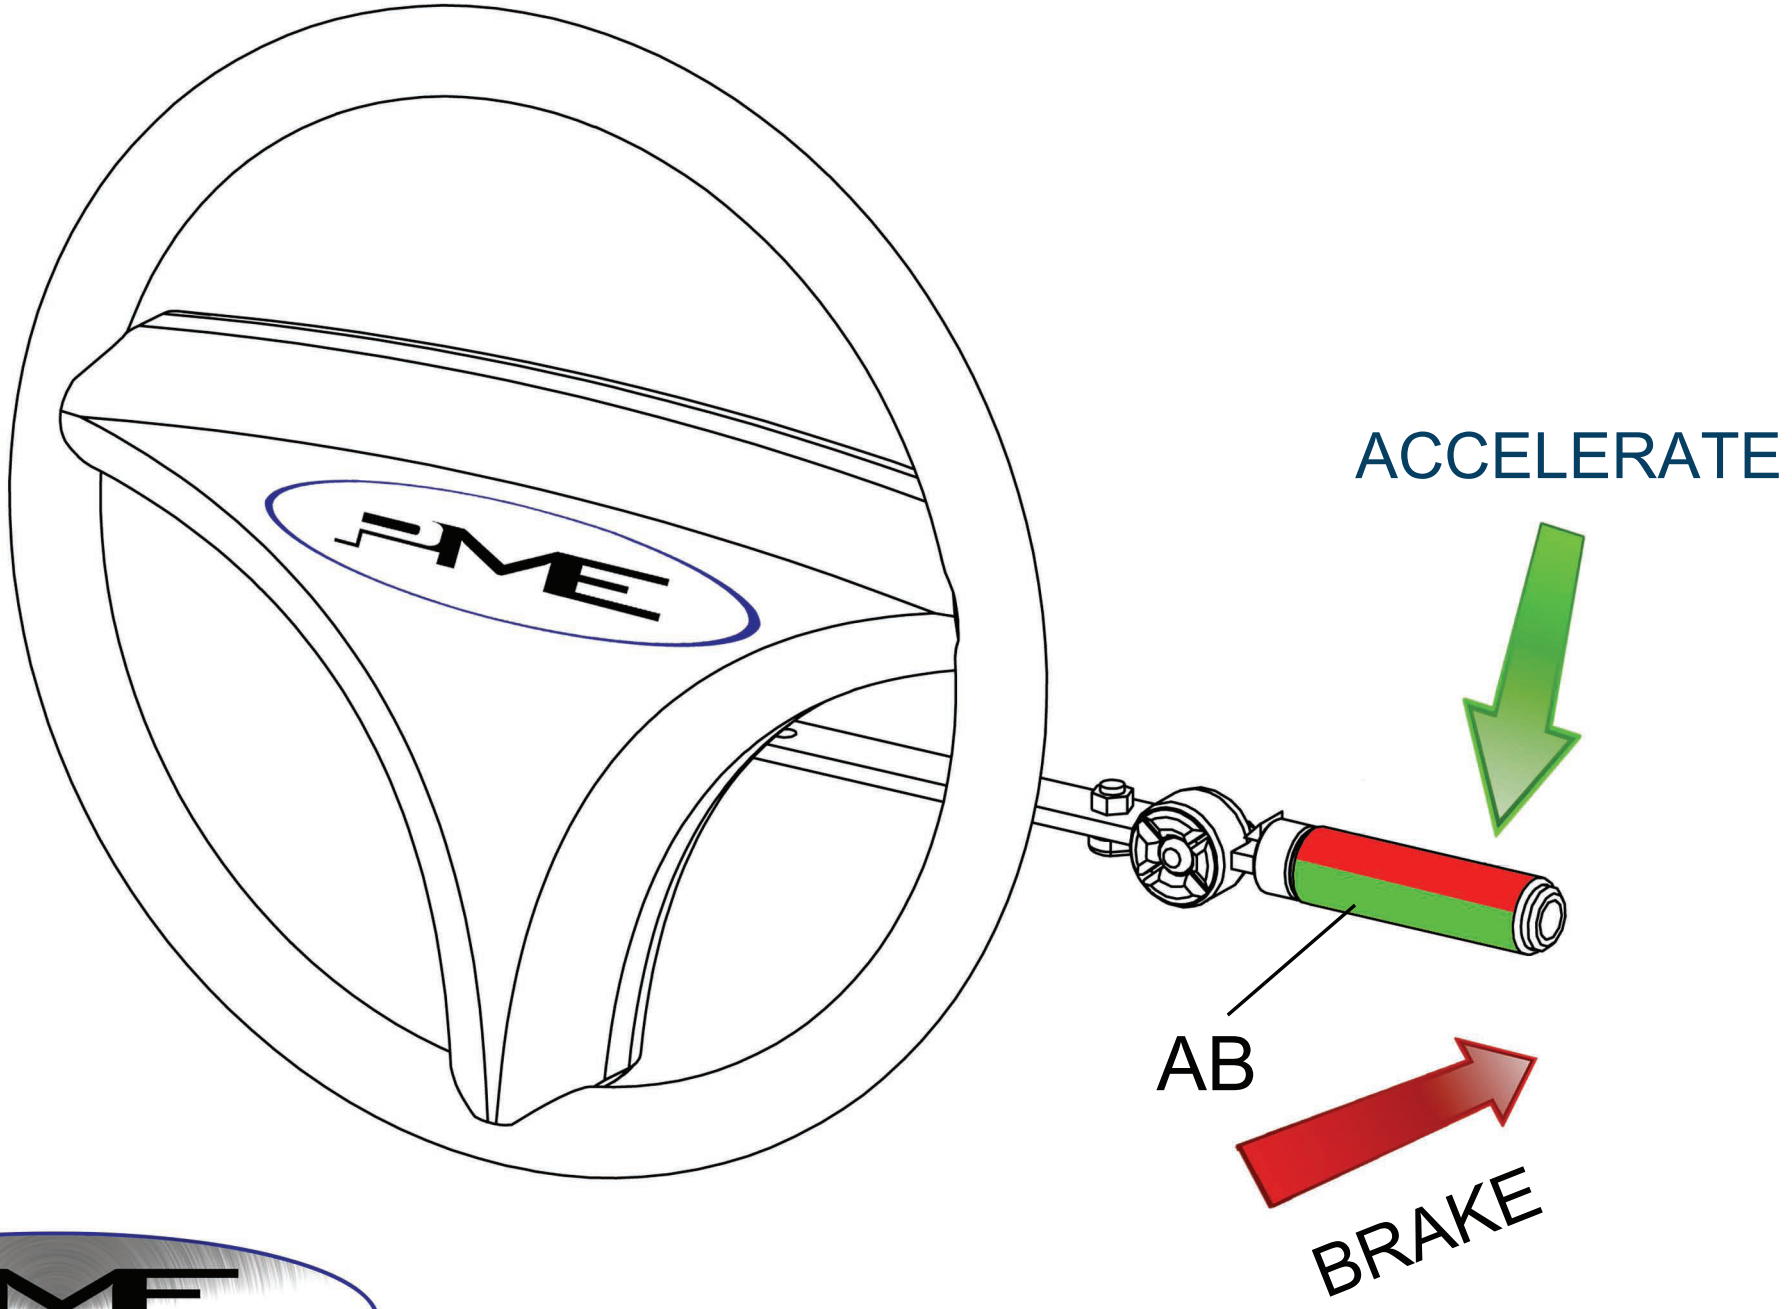

(02) 9482 2808
WWW.PMEAUTOCONVERSIONS.COM.AU

PME AUTO CONVERSIONS

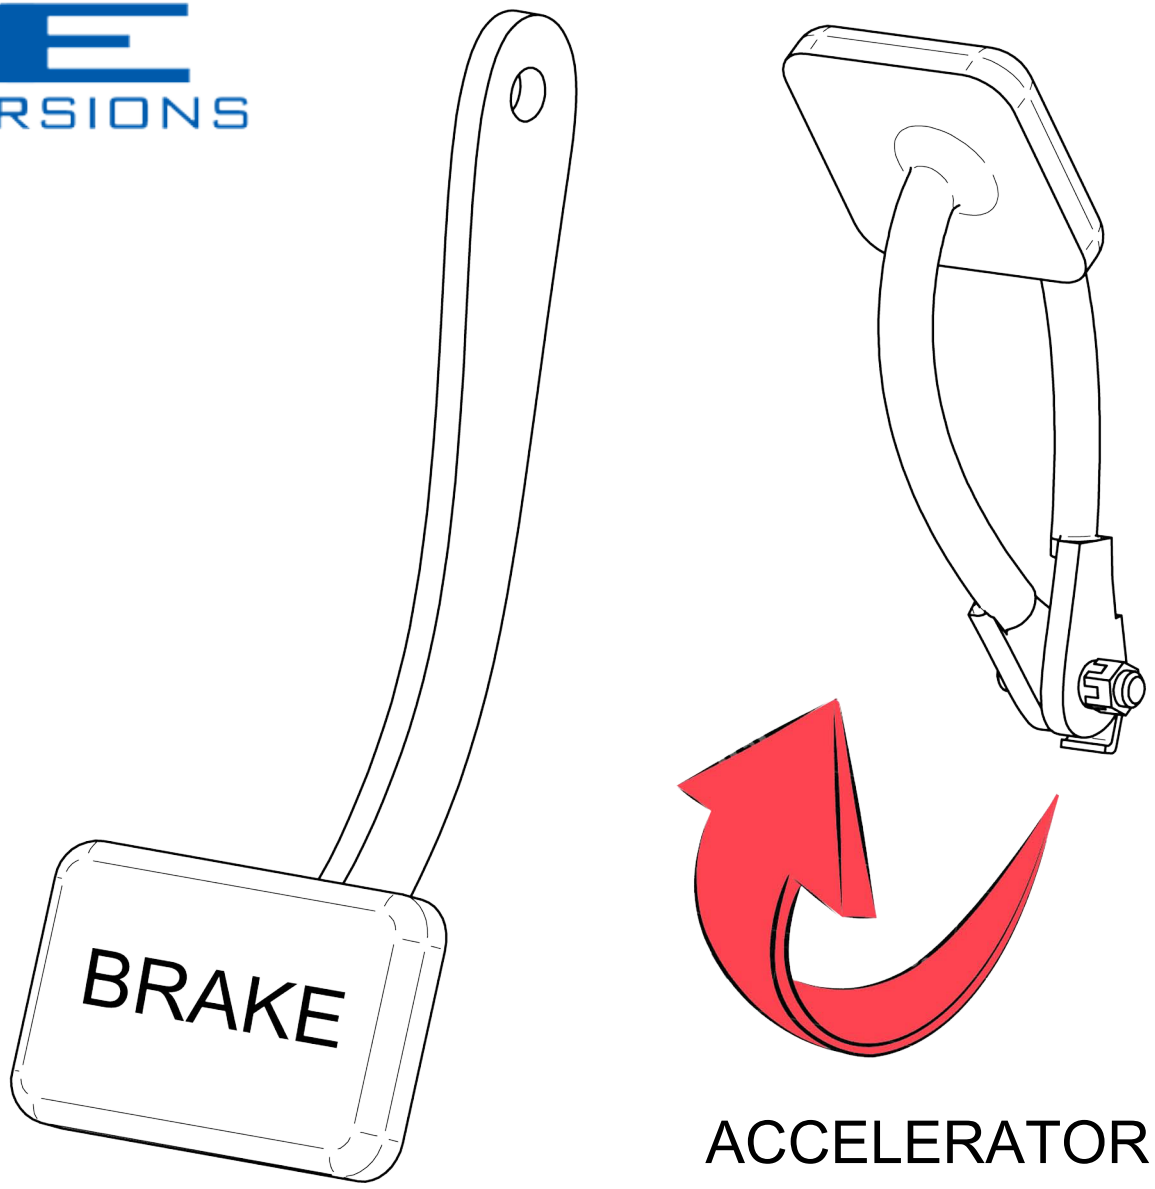

ACCELERATOR UP
(HAND CONTROL IN USE)

OPTIONAL MULTI FUNCTION ACCESSORY SWITCH

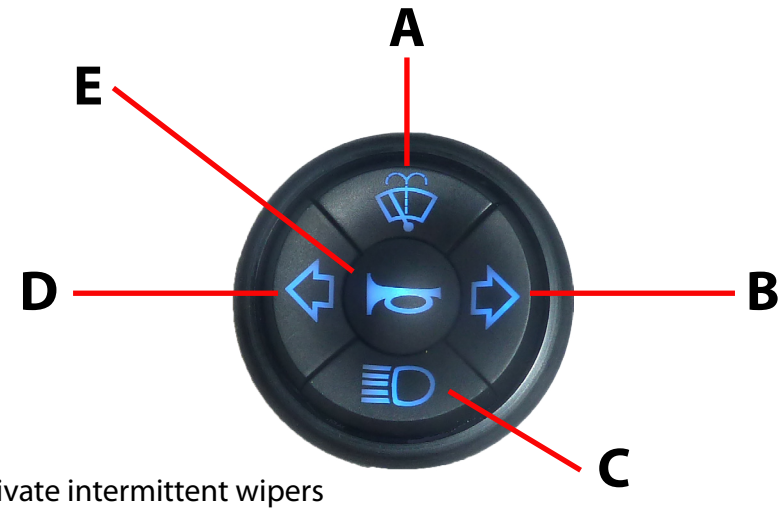

A) **Press** once to activate intermittent wipers
Second Press to activate low speed wipers
Third Press to activate high speed wipers (optional)
Press once more to cancel wipers. When wipers are cancelled you will hear two 'beeps'
Hold to activate windscreen washer jets.

B) **Press** to activate right indicator. This will self cancel once you have completed your manoeuver.
During lane changing manoeuvers you may need to cancel the indicator manually by pressing the button again.

C) **Short Press** to flash the high beams on your vehicle.
Long Press to toggle your high beams on. Long press again to deavtivate.

D) **Press** to activate left indicator. This will self cancel once you have completed your manoeuver.
During lane changing manoeuvers you may need to cancel the indicator manually by pressing the button again.

E) **Press** to activate your vehicles horn.

Problem Management Engineering Pty Ltd, 2017
(02) 9482 2808
6 Kookaburra Road, Hornsby Heights NSW 2077
Info@pmeautoconversions.com.au
pmeautoconversions.com.au
MVRL 30140